



Welcome to our music world



Bluetooth Wireless Headphone

X6 ANC

User's manual

This manual is for reference only!

01/PRODUCT SPECIFICATIONS

Model Number: X6 ANC		
Bluetooth version: Bluetooth 5.2	Paring name: X6 ANC	Driver: 40MM
Impedance: 32OHM	Usage frequency: 2.4GHz	Power level: CLASS II
Battery Capacity: 400MAH+NTC	Frequency response: 20-20000Hz	Bluetooth distanc: Barrier-free about 10m
Charging time: 2hrs	Talk time: 40hrs	Music time: 45hrs
Standby time: 250hrs	Noise reduction chipset: AC7006F8	Supporting agreements: HFP,A2DP,AVRCP
Noise reduction depth/bandwidth: 25dB 50-800kHz		Charging power supply: 5A power supply(round hole port) (Computer USB port, Mobile phone charger, car charger.)
Compatible with 99% of Android and Apple mobile phones with Bluetooth function		

02/PACKING LIST



HEADSET



INSTRUCTION
MANUAL



TYRE-C CHARGING CABLE



AUX-IN CABLE

03/FUNCTION

POWER ON/OFF/PAUSE/PLAY

Power on

Long press for more than 3 seconds, the voice Prompt "power on", enter automatically Bluetooth mode, the Blue LED indicates last 1 seconds.

Power off

When the headset is on, press and hold for 5 seconds to turn off the headset, voice prompt "Power off", the RED LED indicates for 2 second.

Play music

After Bluetooth connection, short press once to play music, And short press once again to pause the music.

Pause music

When the music is playing, short press once again to pause the music.

Audio cable interface

Insert 3.5mm audio cable (Aux-in cable), the bluetooth function is automatically turned off and switched to Aux-in.

Increase volume/switch to the previous track

When the headset is on, short press to increase the volume, long press to switch another song, will prompt "didi" at maximum volume.

Decrease the volume/switch to the next track

When the headset is on, short press to decrease Volume, long press to switch to the next track will prompt "didi" at minimum volume.

USB Charging port

USB Type-C charging port, fast transfer Transmission speed (up to 10Gbps).

ANC button

1. When the headset is on, long press for 2 seconds to turn on the ANC function, voice Prompt "ANC ON", LED indicates green light.

2. In the ANC state, long press for 2 seconds to turn on the ANC function, voice prompt "ANC OFF" and LED indication green light goes out.

AUTOMATIC POWER-OFF

1. When the headset is on, if there is no connection for 5 minutes, it will automatically shut down, the voice prompt "power off", and the red LED indicator will be on for 2 seconds.

2. When the battery is below 3.1V, it will automatically shut down (the low-power voice prompt is about 30 minutes before the low-power shutdown), the voice prompt "power off", the RED LED indicates last on for 2 seconds.

LINE-IN input

When external LINE IN audio is connected, bluetooth is automatically turned off, the voice prompts "power off", and the LED indicates red light for 2 seconds.

GAME MODE

1. Double-click the ANC button to turn on the game mode, and the voice prompt "Game mode".
2. In the game mode, double-click the ANC button to close the game mode, and the voice prompt "Music mode".

VOICE ASSISTANT

After Bluetooth connection, double-click " " to open siri, and then double-click " " to close siri.

05/BLUETOOTH MODE

Pairing:

■ First Pairing:

Headphone enters to Bluetooth Model automatically after power on, voice prompts "Pairing", Red and Blue lights flash alternately.

► Connected:

Search "X6 ANC" Bluetooth Device to connect, voice prompts "connected" after connected successfully, Blue LED light flashes every 10 seconds.



► Disconnected:

Click Bluetooth option on phone to disconnect, voice prompts "Disconnected", Red and Blue Lights flash alternately.



■ Pairing Repeatedly

Turn off Bluetooth option on intelligent device, headphone will enter to repeated pairing mode if not connected successfully within 3 seconds, Blue LED light flashes every 3 seconds. Reopen Bluetooth option, search and connect "X6 ANC", voice prompts "Connected" after pairing successfully, Blue LED light on.

■ Subsequent Pairing

Search and connect with last matched device automatically after power on within 5 seconds.

Phone State:

■ **Call Reminder:** Music and Radio stop automatically when calls coming, Blue indicator light on.

■ **Calling-up:** Short press  to answer calls, Blue indicator flashes every 10 seconds.

■ **Hang up:** Short press  to hang up.

■ **Reject:** Long press  for 2 seconds to reject calls.

06/LED INDICATORS



■ Low power state:

Low power indication: Less than 20%, LED indicator red light light up one times every 10 seconds.

1. Alarming every 10 minutes in playing state, the battery voltage of headphone in 15%, hint one time "Battery Low" .

2. The battery voltage of headphone in 10%, hint once again "Battery Low" .

3. While the battery voltage of headphone less than 5%, headphone power on and flashing red light and hint "Battery Low" at once.

■ Charging State: Red indicator flashes.

■ Fully Charged: Red indicator light on.

■ Standby State: Blue indicator light on.

07/NOTICE



Caution!

- Once the Bluetooth headset in the pairing mode, if there is no pairing connection operation, please turn off the device to save battery.
- Do not perform other operations when searching for Bluetooth device to prevent program errors.
- Please choose an appropriate volume during using to prevent damage to your ears.
- Please pay attention to the good use of the Bluetooth headset to avoid damage to the headset.
- If the headset has not been used for a long time, please recharge it before using it.

08/WARRANTY

The effective warranty period of this product is one year, which should under normal use & maintenance within the warranty period. If there is a problem with the material and function of the device itself, the company will repair and replace the parts free of charge.

The warranty of this product does not apply to:



- A. The headset has exceeded the warranty period;
- B. The user fails to follow the instructions and guidelines, causing the headset to break and the shell/housing to be damaged;
- C. Disassemble, repair, and modify the structure without the authorization of the company;
- D. Unable to provide warranty card and consumption receipt;
- E. Product failure or product failure caused by force majeure such as natural disasters (such as earthquakes, fire houses) damage.

Remarks: The warranty service does not include product transportation costs and providing on-site repair services.