




Quick Start Manual

PSiO Noisebuster Headphones



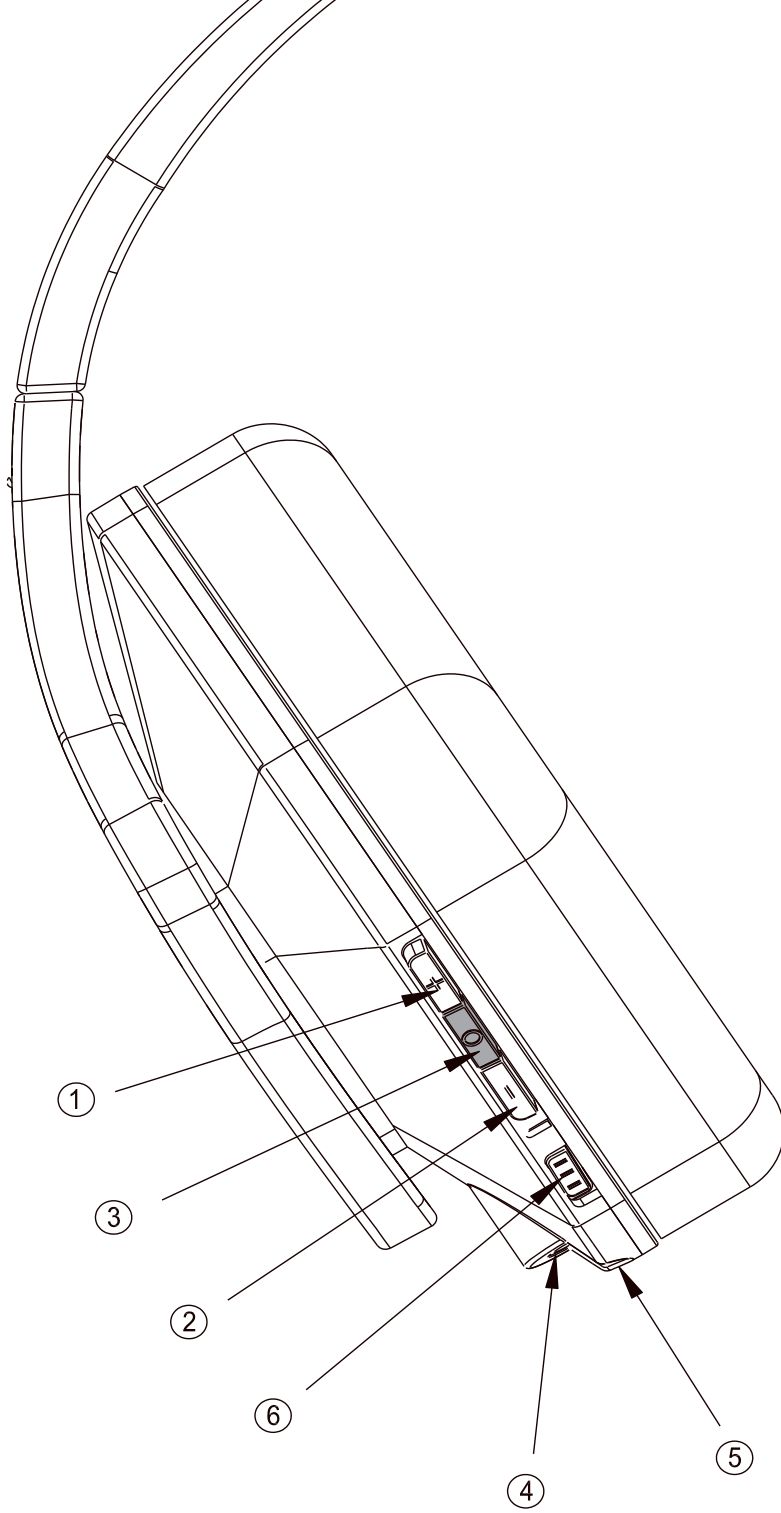

Headphones controls

1. Volume up button: Press and hold to increase the sound volume. When the maximum volume is reached, an acute beep is emitted.
This button also allows you to go back to the previous track: to do this, briefly press the button.
2. Volume down button: Press and hold to reduce the sound volume. When the minimum volume is reached a low beep is emitted.
This button also allows you to skip to the next song: for that, briefly press the button.
3. Ignition, stop, play, pause and call button (answer or reject)
 - To turn the headphones ON or OFF: Press and hold the button until the blue LED turns red for a moment.
When the helmet is turned on the blue LED flashes slowly.
 - To start or pause a song, to accept or reject a phone call: Press brieflyDuring a phone call:
 - Press the button once to receive the call.
 - Press and hold to end or ignore the call.
4. Input for 3.5 mm audio cable to connect to PSiO
(Cable included)
5. Input for micro-USB cable for headphone charging
(Cable included)
6. Button for noise reduction (Noisebuster)
Press the switch, the indicator lights green to indicate that the noise canceling mode is active.

Manual

If the device you are using with the headphones is not equipped with Bluetooth, such as PSiO for example, you will need to use the supplied 3.5mm audio cable.

There are three ways to use the headset:

1. By activating only the noise-cancelling function (command No.6 LED lit in green)
2. By activating only the audio listening function (command No.3 LED lit in flashing blue)
3. By activating both functions simultaneously.

Bluetooth connection with your device

- Press and hold the On / Off button to turn on the headphones.
- Open the Bluetooth settings on your device (smartphone, tablet, computer, TV, etc.) and look for available Bluetooth devices nearby.
- The Device will be named «PSiO ANC» or «X5 ANC» in your Bluetooth discoverable directory and follow the instructions on your device to commence pairing.

The headphones can only be connected to one Bluetooth device at a time.

If you have trouble connecting, make sure the PSiO headphones are not already connected to another Bluetooth device.

If an unwanted connection with a device occurs, cancel the connection in the Bluetooth settings of this unit.

To remove the link (2 possibilities)

1. Disconnect the headphones in the Bluetooth settings of your device.
2. Or press and hold the On / Off button to turn off the headphones.

Recharging the built-in lithium-ion battery

Insert the micro-USB plug of the supplied cable into the micro-USB port of the headphones, and insert the end of the cable into a USB port on your computer or the AC adapter of your PSiO.

When the headphones is charging, a red LED will light up.

The LED turns blue when the charge is complete.

It is recommended not to use the headphones while charging.

WARNING

- Please recharge your battery if you cannot turn on the headphone.
- Please turn off your headphone after your usage to get a longer battery life.
- Please use the charging USB packaging together with headphone.
- Please do not change the battery.
- Please do not keep headphone in a humid place.
- Please do not expose or toss headphone into fire. It will probably cause an accident.
- Please do not try to disassemble the headphone if you are not an expert.
- Please try not to use the USB charging cable that comes with the headphone to charge your phone or other high current devices!
- Please do not spread the headphone speakers excessively when using the device as stretching the headband over 180° may result in cracking the headband.



www.psiocom.com

Copyright © 2020 Psychomed.com® S.A. All rights reserved.
PSiO Noisebuster Headphones Manual - Version #3.

PSiO and the PSiO logo are worldwide registered trademarks of Psychomed.com S.A.

International patented n° PCT/EP2011/068407

Contact Us : info@psiocom.com.